




Disinfecting Drains & P-traps **KloreSe™**

Make a 4,306 ppm **KloreSe™** disinfectant solution - add one 13.1 gram tablet to **QUICKfoam™** - fill to 32 oz mark



Allow tablet to completely dissolve before screwing on pump-head

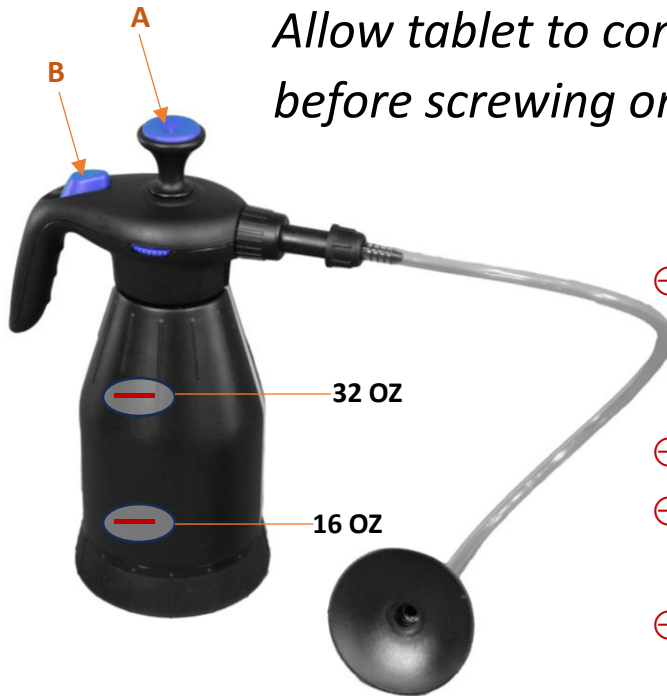

- ⊕ Once tablet has dissolved screw on the pump-head and pump blue pump (A) handle (~ 10 X's) to pressurize.
- ⊕ Set **QUICKfoam** on counter
- ⊕ Place black drain-cap over drain and press firmly to seal
- ⊕ Depress trigger/button (B) to discharge KLORESE foam into drain until the **QUICKfoam** level reaches the 16 oz mark

DO NOT RINSE or RUN WATER in sink for a minimum of 4 minutes *or* leave KLORESE foam in drain until next use



Re-pressurize **QUICKfoam** as required and move on to the next sink.

For further information on cleaning & disinfecting processes using PerfectCLEAN products call

888 920 0370